

Assembly Instructions for New Steam Head



Remove the old steam head by breaking the top and bottom handles off the head. Using a hammer, hit the handles where they join on the side. Eye protection is recommended, as there may be flying pieces when this is done. After removing the old steam head, cut the hose approximately 2 inches, preserving as much hose length as possible.

1. Turn the steamer on to allow the steam to heat and soften the hose. Once the hose is flexible, **TURN THE STEAMER OFF.** Slide the pliable hose over the new steam head until the end of the hose fits tightly against the retainer ring.



2. The bottom half of the handle has molded finger grip impressions. Align the grooves in this bottom half handle with the three rings on the head.



3. Align the grooves on the top half handle with the three rings on the head. As the two halves are aligned in the grooves, four snaps on each side of the handle will align as well.



- 4a. and 4b. Once all the grooves, rings and snaps are aligned, clamp together firmly.



Made in the USA Since 1940 

Jiffy Steamer Company, LLC

4462 Ken-Tenn Highway | Union City, TN 38261

P: 731.885.6690 | 1.800.525.4339 | F: 731.885.6692

jiffysteamer.com | info@jiffysteamer.com